Curtains by Post

Wave Curtains
Installation Instructions




FITTING INSTRUCTIONS

You should have:

Blind parts





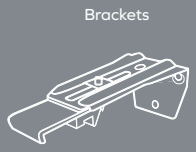

What you'll need:

Tools












The installation of this product should be conducted by someone competent in DIY. Please read the instructions before installing or operating this product. If in doubt, consult a professional. Please take care when unpacking your Curtains, **do not** use a knife or any sharp object.

Before you start, make sure the screws provided are suitable for your fitting surface. Some surfaces will require wall plugs or different screws to the ones we provide. If unsure, seek professional help or advice.

Ensure you position the brackets a suitable distance away from any obstructions such as window/door handles to ensure your Curtains operate smoothly.


Recess Fitting

For Outside Recess (Exact) see page 4

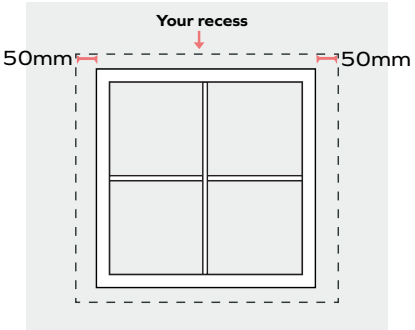


Step 1: Measure
The brackets should be positioned **50mm** in from each side of your recess. Using your tape measure, mark these points with a pencil. Evenly space additional brackets between the two end points.

Step 2: Fixing Brackets:
You will need to top fix the brackets (subject to if you have sufficient fixing). Hold the brackets to the marks made in Step 1 and mark the relevant hole with a pencil. Drill the holes and use suitable fixings to fix the brackets in place.

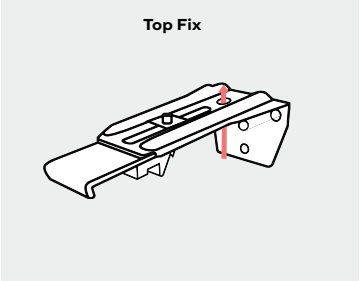


FITTING INSTRUCTIONS


Top Tip
The depth of the bracket is adjustable, allowing the track to be closer to or further from the fixing surface. Loosen the screw at the back of the top section, slide the section backwards or forwards to adjust, then tighten the screw to lock.

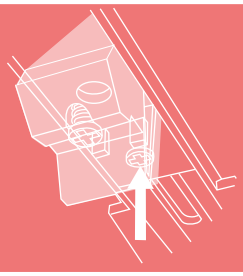

Step 3: Fitting the Track
Unscrew the gold screw underneath the bracket slightly to allow the cantilever to slide back and forth. There is no front or back to the track so it can be fitted either way. Angle the track into the bracket and push into the cantilever *(diagram 1)*. The track should snap into position.
Tighten the gold screw to hold the track in place *(diagram 2)*.

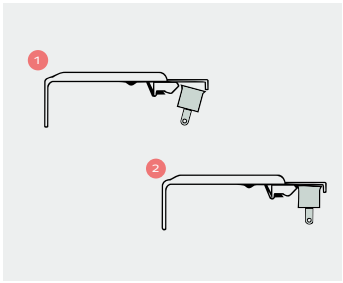


Step 4: Fitting the Curtain
Now your track is in position, make sure the runners are spread out along the track. Starting from the outermost hook *(diagram 1)*, slide the hooks that are attached to the curtain tape onto the runners *(diagram 2)*.

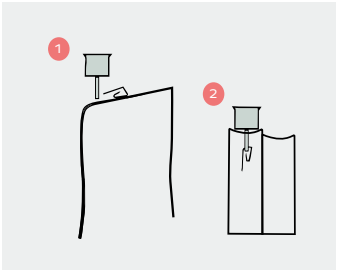


Step 5: Dressing Your Curtains
When your Curtains are first hung, carefully use a steamer or steam setting on your iron to gently steam out any creases in the fabric. Be very careful not to touch the fabric while doing this. We recommend you tie back your curtains for at least **48 hours** to suitably dress and train your curtains.
Please note: Steaming can also affect the final length of the curtains. Some fabrics need creases to be fully steamed out, which may cause the fabric to drop. Other fabrics may contract slightly during transit and may require steaming.

Top Tip: Use cling film or remnants of fabrics to tie back your Curtains.

Dressing your curtains

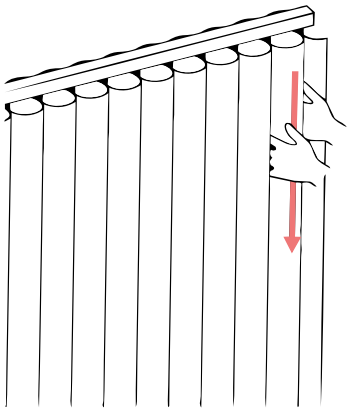

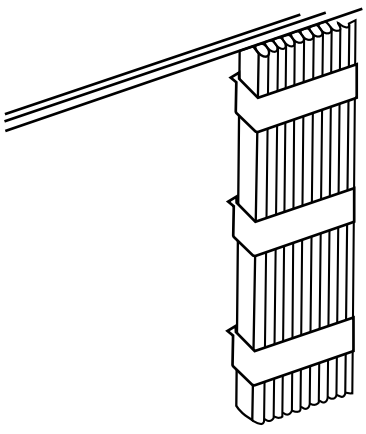


The leading glider has a brake that prevents movement when straight, keeping the Curtains in place. To ensure smooth operation and extend its lifespan, please angle it before sliding.

Outside Recess (Exact) Fitting


Step 1: Curtain Height
Hold one curtain up to the window to establish the correct top and bottom position, ensuring the curtain sits neatly outside the window, checking that it clears any obstructions such as radiators and hangs straight.

Use a pencil to mark the top of the Curtain on the wall. Once marked, place the Curtain neatly to one side.

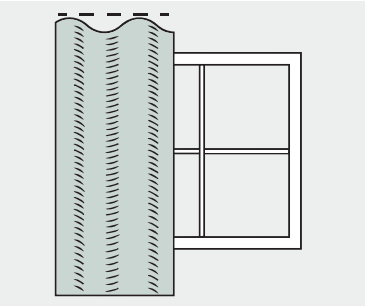


Outside Recess Fitting (Exact)

Step 2: Mark the Track Position
Position the track against the wall so the hole in the carrier is level with the pencil marks in Step 1. Mark the top of the track and use a spirit level to mark a straight, faint line across your wall. You will fit your brackets along this line.

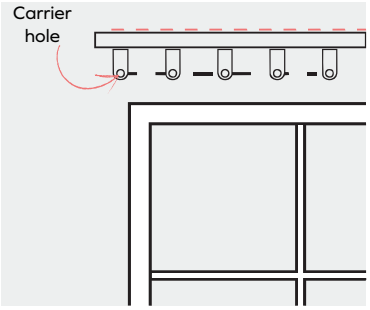


Outside Recess Fitting (Exact)


Step 3: Measure
The brackets need to be positioned **50mm** in from each side of the track. Using your tape measure, measure and mark these points with a pencil. Additional brackets should be spaced evenly between the two end brackets.

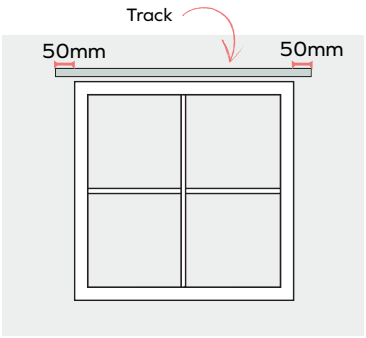

Step 4: Fixing Brackets
You will need to face fix your brackets into your wall (subject to if you have sufficient fixing). Hold the brackets to the pencil marks in Step 1. Mark the relevant hole with a pencil. Drill the holes and use suitable fixings to fix the brackets.

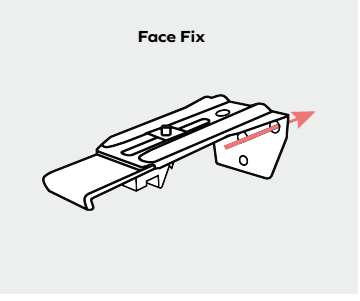


Top Tip
The depth of the bracket is adjustable, allowing the track to be closer to or further from the fixing surface. Loosen the screw at the back of the top section, slide the section backwards or forwards to adjust, then tighten the screw to lock.

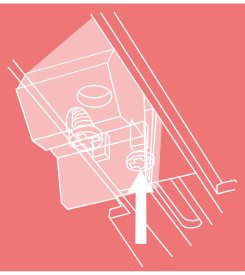


FITTING INSTRUCTIONS

Step 5: Fitting the Track
Unscrew the gold screw underneath the bracket slightly to allow the cantilever to slide back and forth. There is no front or back to the track so it can be fitted either way. Angle the track into the bracket and push into the cantilever *(diagram 1)*. The track should snap into position.
Tighten the gold screw to hold the track in place *(diagram 2)*.

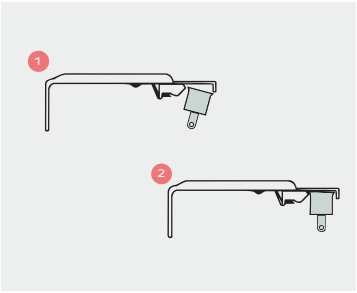


Step 6: Fitting the Curtains
Now your track is in position, make sure the runners are spread out along the track. Starting from the outermost hook *(diagram 1)*, slide the hooks that are attached to the Curtain tape onto the runners *(diagram 2)*.

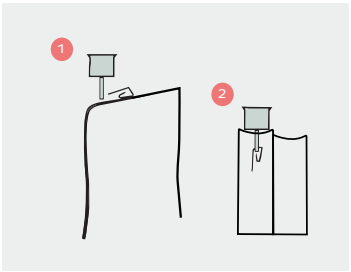


Step 7: Dressing Your Curtains
When your Curtains are first hung, carefully use a steamer or steam setting on your iron to gently steam out any creases in the fabric. Be very careful not to touch the fabric while doing this. We recommend you tie back your Curtains for at least **48 hours** to suitably dress and train your Curtains.
Please note: Steaming can also affect the final length of the Curtains. Some fabrics need creases to be fully steamed out, which may cause the fabric to drop. Other fabrics may contract slightly during transit and may require steaming.

Top Tip: Use cling film or remnants of fabrics to tie back your Curtains.

Dressing your Curtains

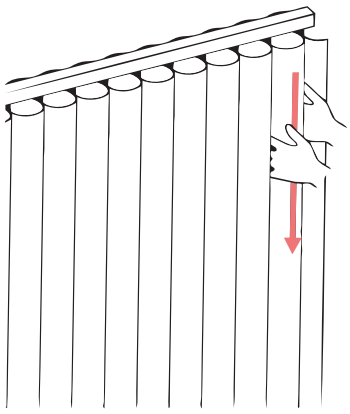

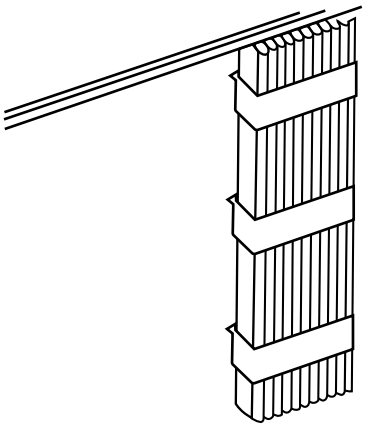

The leading glider has a brake that prevents movement when straight, keeping the Curtains in place. To ensure smooth operation and extend its lifespan, please angle it before sliding.

MAINTENANCE

This product is maintenance free however, we recommend that regular visual checks are carried out to ensure that no components have been damaged, which could result in operating difficulties and/or pose a safety risk. If any maintenance is required, we recommend that the work is carried out immediately by a reputable blind or curtain company.



DO NOT WASH
These curtains should not be washed in water.

DO NOT BLEACH
Bleach must not be used.

DO NOT TUMBLE DRY
Tumble drying is not suitable for these curtains

DO NOT IRON
Ironing is not recommended.

PROFESSIONAL DRY CLEAN ONLY
Please have the curtains cleaned by a professional dry cleaner.

HOW ABOUT **MATCHING?**

Shop our range of Roman Blinds and Cushions to pair with your Curtains!



CLICK ME

ROMAN BLINDS



CUSHIONS

CLICK ME

Did you know?

Alongside our written instructions, we also provide helpful video guides to show you exactly how to fit your Wave Curtains.

CLICK ME

Watch Now

Stay social with us on:

WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords.

Do not tie cords together. Make sure cords do not twist and create a loop.



child safe

make it safe™

BBSA